


MV Airo 2 Heater Parts


Exploded Heater Parts Diagram

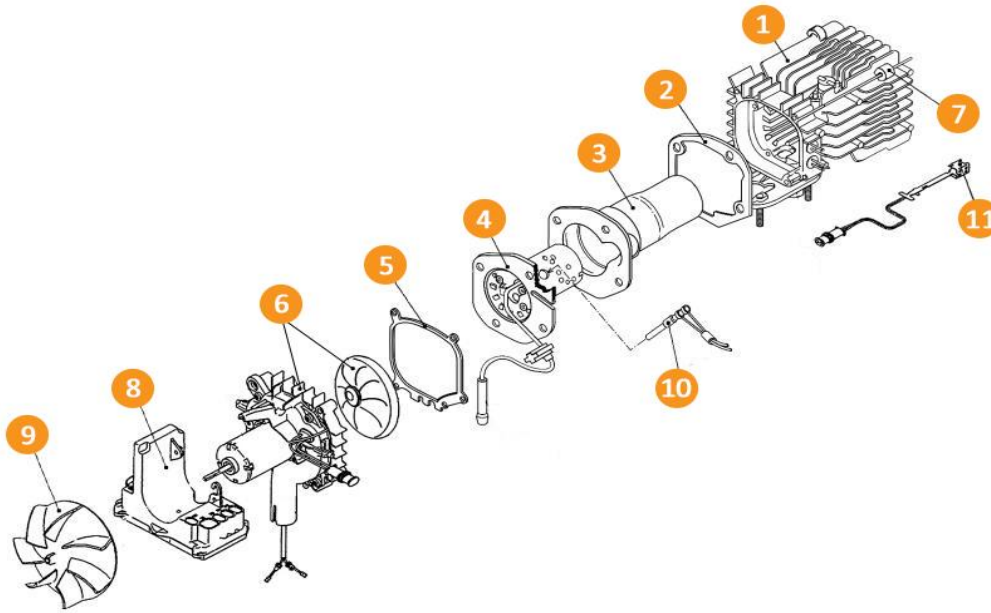

- 1. Heat Exchanger Assembly
- 3. Combustion Chamber
- 5. Gasket 2
- 7. Insulating Bush
- 9. Fresh Air Fan
- 11. Overheat Sensor


- 2. Gasket
- 4. Burner Assembly
- 6. Fan Motor Assembly
- 8. ECU
- 10. Glow Pin

Exploded Heater Covers Diagram

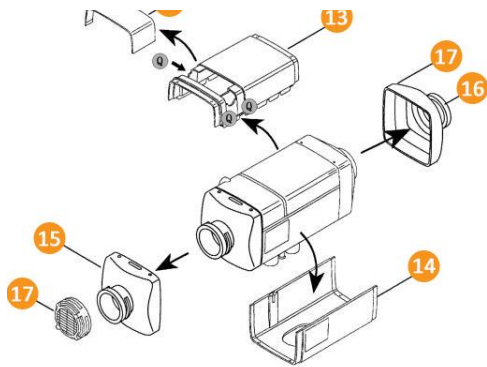

- 12. Junction Box Cover
- 13. Top Case
- 14. Bottom Case
- 15. Inlet Cover
- 16. Outlet Cover
- 17. Grill

Add on Diagram

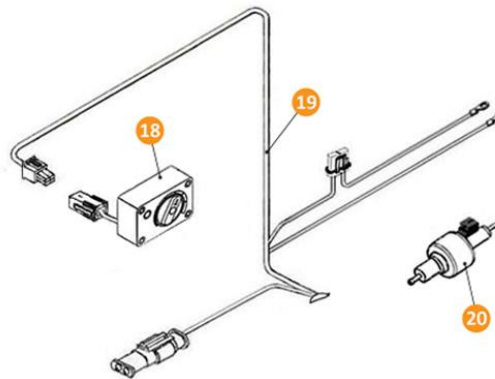

- 18. Control Switch
- 19. Main Wiring Harness
- 20. Fuel Pump