


MV Airo 2 Accessory Parts

Exploded Heater Parts Diagram

Exploded Parts Diagram

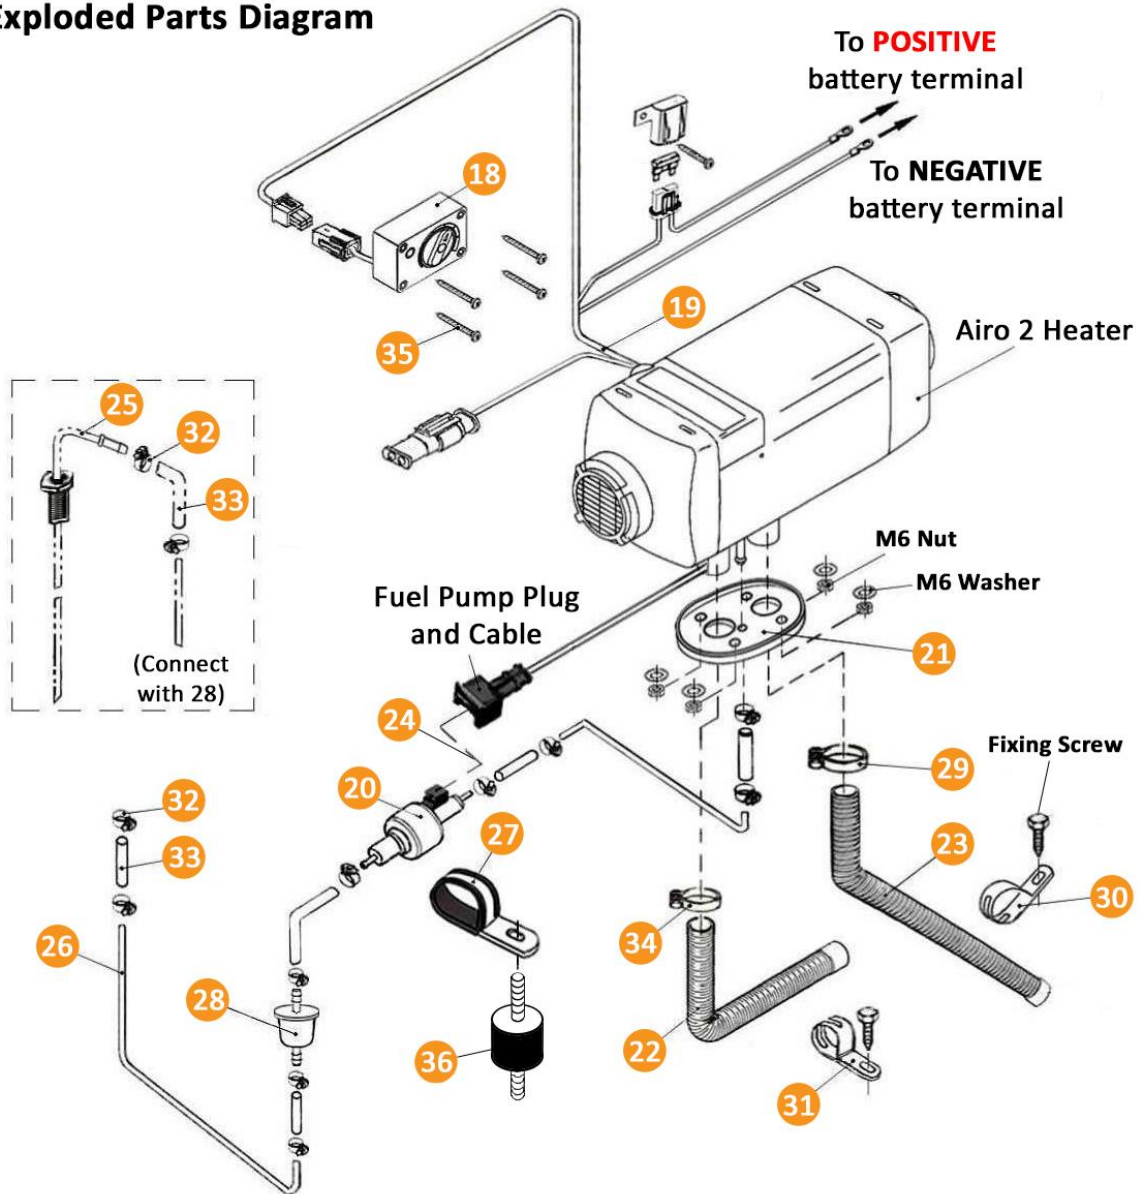

- 18. Control Switch
- 19. Main Wiring Harness
- 20. Fuel Pump
- 21. Mounting Gasket
- 22. Combustion Air Inlet Pipe
- 23. Exhaust Pipe
- 24. Fuel Pump Extension Loom
- 25. Fuel Standpipe
- 26. Fuel Pipe
- 27. Fuel Pump Bracket

- 28. Fuel Filter
- 29. Exhaust Pipe Clamp
- 30. Exhaust Pipe Fixing Clamp
- 31. Air Inlet Pipe Fixing Clamp
- 32. Fuel Line Connector Clamp
- 33. Fuel Line Connector
- 34. Air Inlet Pipe Clamp
- 35. Control Switch Fixing Screw
- 36. M6 Anti-Vibration Mount

