



MV Airo 5 Heater Parts

Exploded Heater Parts Diagram

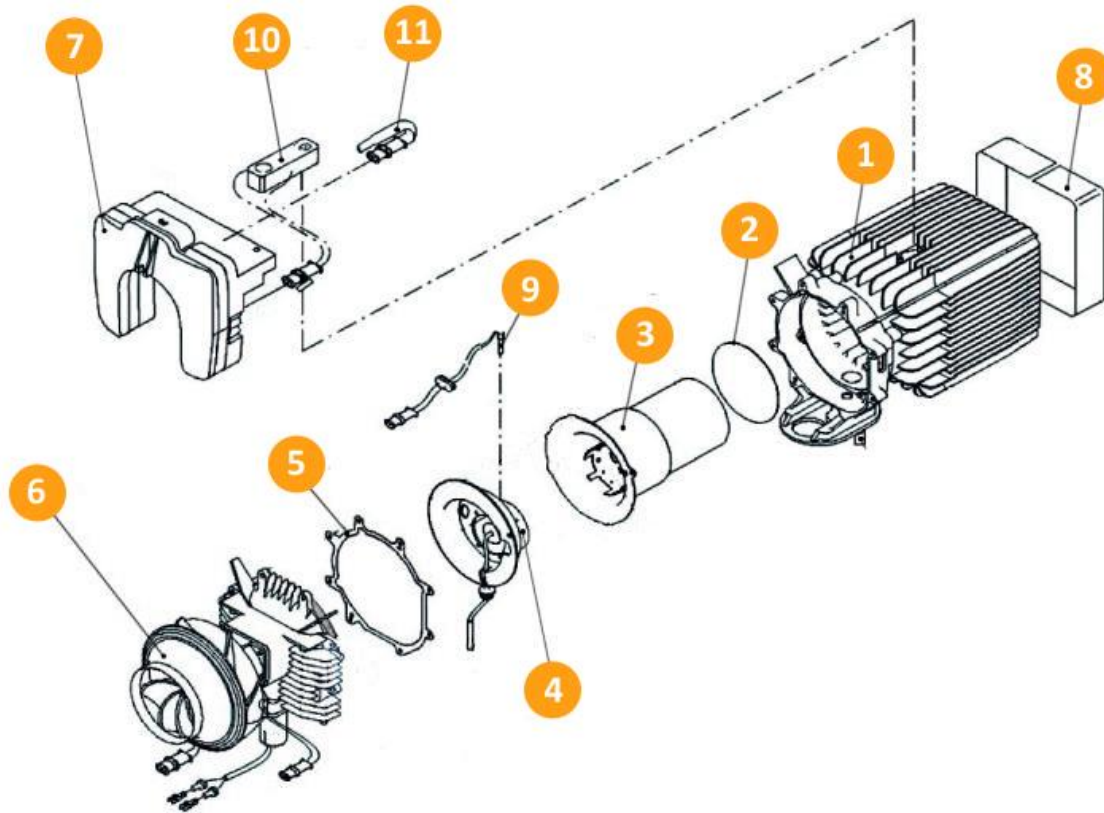

- 1) Heat Exchanger
- 2) O-Ring
- 3) Combustion Chamber
- 4) Burner Assembly
- 5) Heat Exchanger Seal
- 6) Fan Motor Assembly (includes combustion supporting fan blades and the heating fan blade wheel)

- 7) ECU
- 8) Insulating Mat
- 9) Glow Pin
- 10) Overheat Sensor
- 11) Temperature Sensor

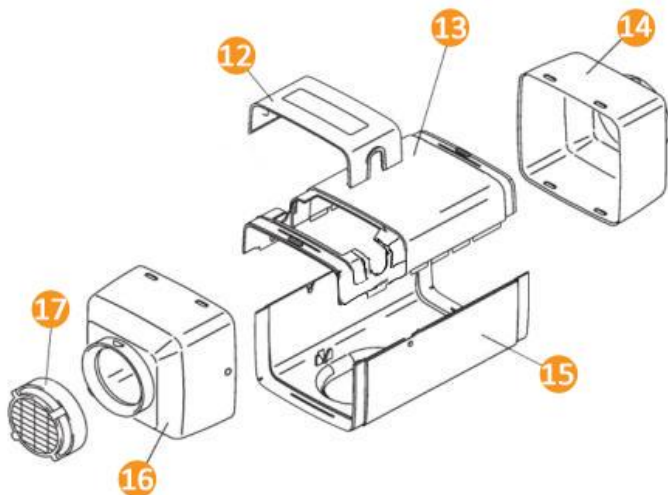

- 12) Junction box cover
- 13) Top hood-shape cover
- 14) Air Outlet Cover
- 15) Bottom hood-shape cover
- 16) Air inlet Cover
- 17) Gril